



ELEPHANT SEESAW

Instruction

Maintenance:

- Check all nuts & bolts for tightness & tighten when required, if any. Please keep this instruction for future reference.
- Check all coverings and bolts for sharp edges and replace them when required, if any.
- Before each use, please check whether the components are firm and intact. Please wipe with a dry cloth regularly.

Caution:

- Ensure the product is in good condition and all parts are complete before use.
- After adult installation, please make sure all parts are securely assembled before allowing children to use it.
- Do not let children play with broken, damaged, or deformed toys to prevent accidents.
- Keep packaging materials away from children, as they are not toys and may pose a danger.
- This toy is designed for domestic use and is suitable for both indoor and outdoor play.

Warnings:


- This product must be assembled by an adult. Keep all parts and tools away from children until fully assembled.
- The package contains small parts and hardware that pose a choking risk and may have sharp edges or points. Handle with care.
- This product is designed for children aged 3 years and above.
- To prevent serious injury, adult supervision is mandatory at all times. Never leave children unattended during use.
- Ensure the equipment is on a level surface, at least 7 feet away from pools, power lines, overhangs, other playground equipment, driveways, or roads.
- Do not attach objects like jump ropes, chains, clotheslines, pet leashes, or cables to the slide. These may cause strangulation or other hazards.

Part Details

List of Parts	No.
Seesaw Body	1
Side Panel	2
Handle	2
Pivot Rod	1
Base	1
Nut	10 (2 spare)
Eye Decal Set	1
Instruction Manual	1



Seesaw Body x 1

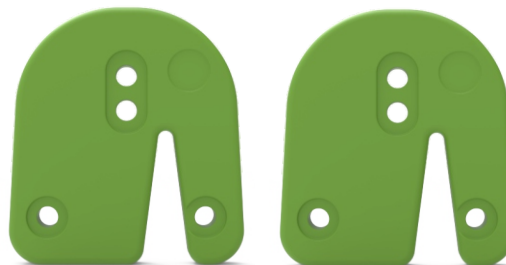

Side Panel x 2



Handle x 2




Pivot Rod x 1




Nut x 10 (2 Spare)



Eyes Decal Set x 1

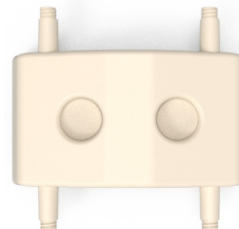

Base x 1

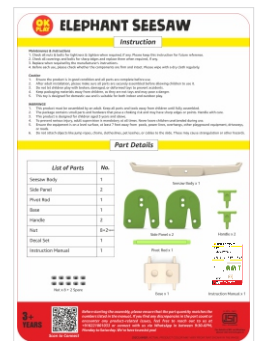

Instruction Manual x 1

Model No: 2030-A

3+
YEARS



Customer Support



Assembly Video

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!

IS : 9873 - PART I




CM/L - 9512463818

For details of BIS certification, please visit www.bis.gov.in

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE

1 STEP

Required Assembly Parts

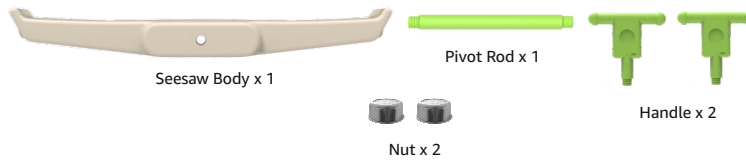

Before starting the assembly, lay out a carpet on the floor to avoid scratches.





Take the Seesaw Body and the two handles from the packaging. Insert each handle into the designated hole on the seesaw body as shown in the image.

Flip the seesaw body over and tighten the nuts as shown in the image above.

Insert the pivot rod into the designated hole on the seesaw body as shown in the image above.

2 STEP


Required Assembly Part

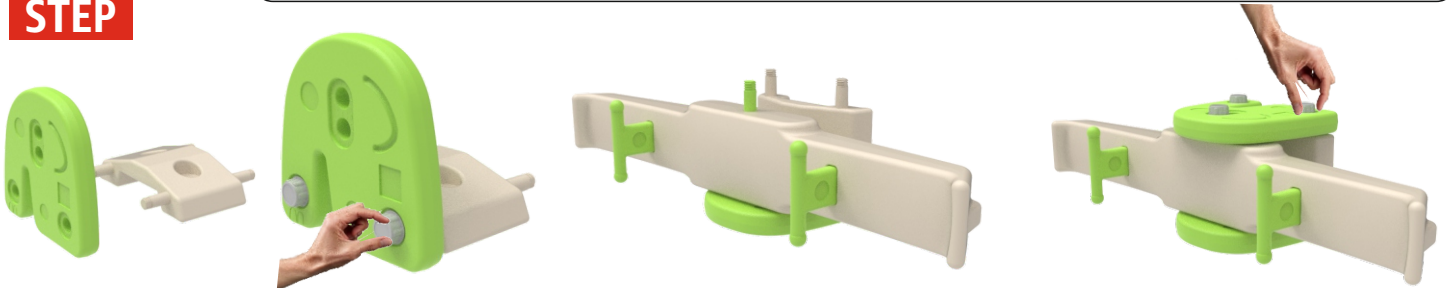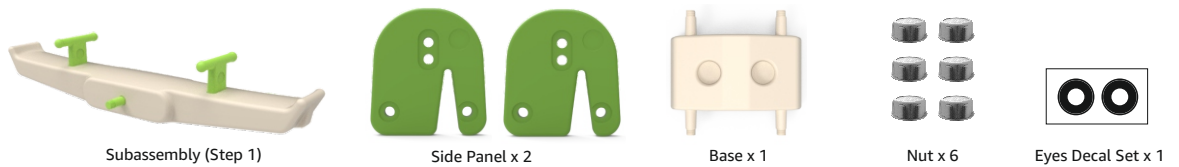

Take the side panel and the base from the packaging. Insert the threaded pins on the side of the base into the corresponding holes on the side panel as shown in the image. Place a nut onto the threaded end of each pin and tighten both the nuts.

Place the side panel flat on the ground. Take the subassembly (step 1) and align its pivot rod with the designated hole on the side panel. Push the subassembly (step 1) down so that the pivot rod slides into the hole on the side panel.


Take the other side panel and secure it to the seesaw body with three nuts.

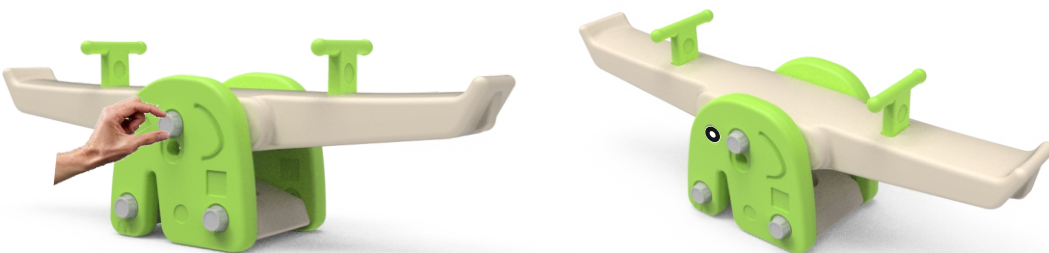

Turn the assembly right-side up, place a nut on the pivot rod and tighten it.

Fix the eye label on both the side panels at the position as shown in image above.

You can adjust the height of the seesaw to suit your needs. To lower the height, insert the pivot rod into the lower hole on each side panel and secure it in place using the nuts.

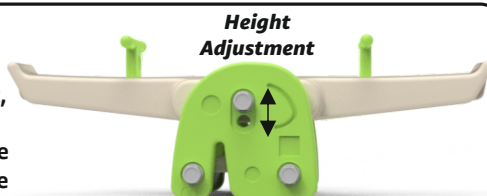

Elephant Seesaw

Gigantic Fun, Jumbo Smiles!