



ICE-CREAM EASEL

Instructions

Maintenance:

- Before each use, ensure that the board is not wobbly.
- Wipe with a dry, soft cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be set up by an adult only.
- Never use permanent markers on the drawing board.
- Always place the product on an even surface. Using it on concrete or a rough surface can make it unsteady.
- Packaging materials are not safe to play with and should be kept away from kids.
- Adult supervision is required when kids are using this product.
- When not in use, store the magnetic numbers and letters in the provided container to safeguard against moisture which can diminish their magnetic strength.
- Keep this instruction manual for future reference.

Warnings:

- Never place the magnetic numbers and letters close to electronic devices.

! Remove the protective film from the drawing board prior to first use.

! Not suitable for children under 3 years of age. Contains small parts, Choking Hazard.

Part Details



Drawing Board x 1



Pen Holder x 1



Marker Set x 1




Duster x 1

List of Parts	No.
Drawing Board	1
Pen Holder	1
Magnetic Number Set	1
Duster	1
Marker Set	1
Instruction Manual	1



Magnetic Numbers
& Letters Set x 1

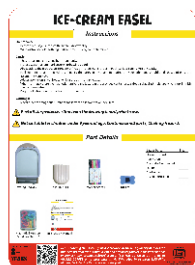

Instruction Manual x 1

Model No: 70134-A

4+
YEARS



Scan to Connect

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!

IS : 9873 - PART I



CM/L - 9512463818

For details of BIS certification,
please visit www.bis.gov.in

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE

1 STEP

Assembly Instructions

Required Assembly Part



Drawing Board x 1

Before starting the assembly, lay out a carpet on the floor to avoid scratches.

Rear Bracket



Position the drawing board on a flat surface making sure its base is in contact with the ground and open its rear bracket to the maximum rear extension as shown in the image.



To adjust the height of the drawing board, loosen the adjustment nuts located at the back of the drawing board. Gently raise the board upwards to the desired height and then tighten the nuts, securing the board at the new height.

2 STEP

Required Assembly Parts



Subassembly (Step 1)



Pen Holder x 1



Take the pen holder and mount it on the drawing board as shown in the images above.

Your Ice-Cream Easel is now ready for use!



Remove the protective film from the drawing board prior to first use.

