



ICE CREAM EASEL SET

Instructions

Maintenance:

- Before each use, ascertain that all the nuts are firmly tightened and all parts are securely fastened to each other.
- Wipe with a dry, soft cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be assembled by an adult only. Keep all the parts out of the reach of the kids until fully assembled.
- Never use permanent markers on the drawing board
- Always place the product on an even surface. Using it on concrete or a rough surface can make it unsteady.
- Adult supervision is required when kids are using this product.
- When not in use, store the magnetic numbers and letters in their container.

Warnings:

- Avoid over-tightening the nuts as it may cause damage to the parts.



Not suitable for children under 3 years of age. Contains small parts, Choking Hazard.

Part Details



Drawing Board x 1



Seat x 1



Backrest x 1



Side Panel x 2



Pen Holder x 1



Magnetic Number Set x 1



Duster x 1



Marker Set x 1



Key x 2



Medium Nut x 8 (2 Spare)



Instruction Manual x 1

List of Parts	No.
Drawing Board	1
Seat	1
Backrest	1
Side Panel	2
Magnetic Number Set	1
Duster	1
Marker Set	1
Key	2
Medium Nut	8 (2 Spare)
Pen Holder	1
Instruction Manual	1

1 STEP

Assembly Instructions

Required Assembly Parts



Before starting the assembly, lay out a carpet on the floor to avoid scratches.



Position the drawing board on a flat surface making sure its base is in contact with the ground and open its rear bracket to the maximum rear extension as shown in the image. Remove the protective film from the drawing board.

To adjust the height of the drawing board, loosen the two adjustment nuts at the back of the drawing board one by one and gently raise the board upwards. Tighten the nuts back once you have set the desired height.

Take the pen holder and fix it in place on the drawing board.

Model No: 70134

4+ YEARS



Scan to Connect

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!



For details of BIS certification, please visit www.bis.gov.in

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE

2 STEP

Required Assembly Parts



Backrest x 1



Side Panel x 1




Key x 1



Medium Nut x 1

Take the backrest and a side panel from the packaging. Align the threaded pin on the side of the backrest with the designated hole on the side panel and secure them together by tightening a medium nut with the key provided in the packaging.

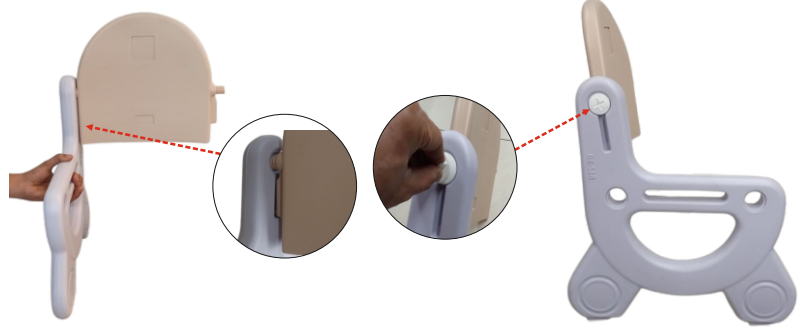

3 STEP

Required Assembly Parts



Subassembly (Step 2)



Seat x 1




Medium Nut x 2



Key x 1

Take the seat with its smooth side facing up and secure it to the subassembly (step 2) with two medium nuts.

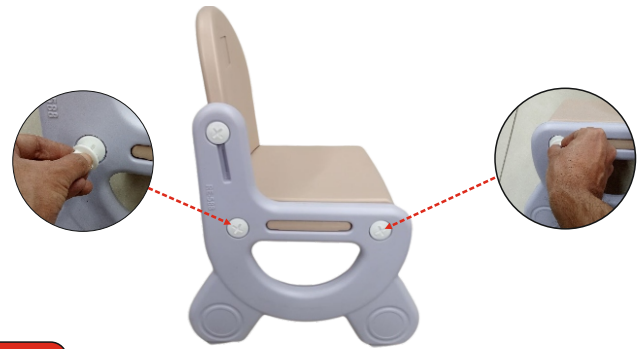

4 STEP

Required Assembly Parts



Subassembly (Step 3)



Side Panel x 1




Medium Nut x 3



Key x 1

Take the other side panel from the packaging and fasten it to the subassembly (step 3) with three medium nuts.

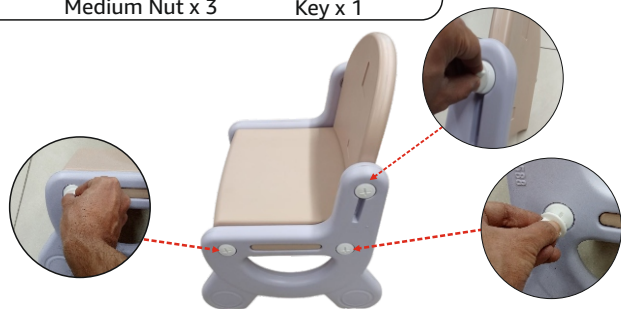

Your Ice Cream Easel is now ready for use!



Remove the protective film from the drawing board prior to first use.

