



PLAY PEN

Instructions

Maintenance:

- Before each use, ascertain that all the all the parts are securely fastened.
- Always wipe the product with a plane, dry cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be assembled by an adult only. Keep all the parts out of the reach of kids until the product is fully assembled.
- Always place the product on an even surface. Using it on concrete or a rough surface can make it unsteady and may cause injuries.
- Packaging materials are not safe to play with and should be kept away from kids.
- Adult supervision is recommended when kids are using the slide.

Warnings:

- Always assemble on a non-abrasive surface, ideally a carpet, to avoid scratches and make sure there are no sharp objects placed nearby.

Part Details



Color A Panel x 3



Color B Panel x 3



Base x 6



Instruction Manual x 1

List of Parts	No.
Color A Panel	3
Color B Panel	3
Base	6
Instruction Manual	1

1
STEP

Assembly Instructions

Required Assembly Parts



Color A Panel x 3



Color B Panel x 3



Base x 6

Before starting the assembly, lay out a carpet on the floor to avoid scratches.



Take a Color A panel and a base from the packaging. Align the center of the color A panel with the opening at the top of the base and push the color A panel downwards, securing both together. Similarly, attach a base each to the remaining color A panels and all color B panels.

Note: While securing every color panel to the base, make sure the color panel is positioned correctly, following the orientation as shown in the images above.

Model No: 3330

3+
MONTHS



Customer Support



Assembly Video

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE.



For details of BIS certification, please visit www.bis.gov.in

2 STEP

Required Assembly Parts



Color A Panel (with base) x 1




Color B Panel (with base) x 1



Each panel features hooks on one side and a vertical rod (with nut and washer) on the other side.

Take a color A panel, and remove the nut and washer from its rod. Position the color A panel next to the color B panel, making sure the rod of the color A panel is adjacent to the hooks of the color B panel. Latch the hooks of the color B panel onto the vertical rod of the color A panel.

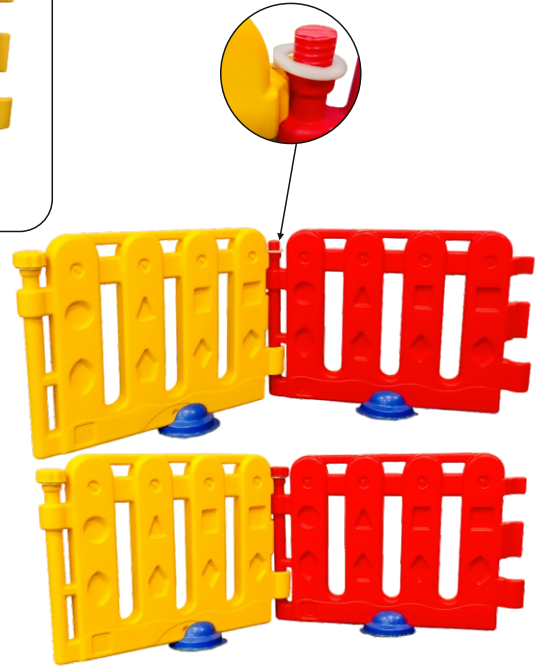

Take the washer that you removed earlier and put it back onto the rod of the color A panel, making sure the pin on the underside of the washer goes into the small hole at the top hook of the color B panel. Next, tighten the nut, securing both color A and color B panels together.

3 STEP

Required Assembly Parts



Subassembly (Step 2)



Color A Panel (with Base) x 2



Color B Panel (with Base) x 2



Repeat the above process, alternating between the color A and color B panels: color A-color B-color A-color B-color A-color B. Make sure each joint is securely locked before moving to the next panel.

As you attach the final panel, curve the sequence into a closed loop.

Your Play Pen is now ready for use!