



ROUND PLAY PEN

Instructions

Maintenance:

- Before each use, ascertain that all the all the parts are securely fastened.
- Always wipe the product with a plane, dry cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be assembled by an adult only. Keep all the parts out of the reach of kids until the product is fully assembled.
- Always place the product on an even surface. Using it on concrete or a rough surface can make it unsteady and may cause injuries.
- Packaging materials are not safe to play with and should be kept away from kids.
- Adult supervision is recommended when kids are using the slide.

Warnings:

- Always assemble on a non-abrasive surface, ideally a carpet, to avoid scratches and make sure there are no sharp objects placed nearby.

Part Details



Color A Panel x 4

Color B Panel x 4



Left Shoe x 8



Right Shoe x 8



Connector x 8



Instruction Manual x 1

List of Parts	No.
Color A Panel	4
Color B Panel	4
Left Shoe	8
Right Shoe	8
Connector	8
Instruction Manual	1

1 Assembly Instructions

Required Assembly Parts



Color A Panel x 4



Color B Panel x 4



Left Shoe x 8



Right Shoe x 8

Before starting the assembly, lay out a carpet on the floor to avoid scratches.



Tabs



Rubber Shoes

- Take a rubber shoe from the packaging, align its opening with a tab at the bottom of the color A panel.
- Push the shoe firmly onto the tab, ensuring it fits snugly.
- Repeat steps (A) and (B) to attach another shoe to the other tab on the bottom of the color A panel.

Repeat steps (A) through (C) to attach shoes to the remaining color A panels and all the color B panels.

Model No: 21414

3+ MONTHS



Scan to Connect

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!

IS : 9873 - PART I



CM/L - 9512463818

For details of BIS certification, please visit www.bis.gov.in

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE.

2 STEP

Required Assembly Parts



Color A Panel (with shoes) x 4



Connector x 8



Color B Panel (with shoes) x 4



Connector fastened to the side with one pin



Connector fastened to the side with one pin

Each panel has two pins on one side and one pin on the opposite side. Take a connector from the packaging and fix it to the pin located at the bottom of a panel. Do this with the remaining panels (both color A and color B).

Note: Ensure the connector is fastened to the side with only one pin. Also, the connector is fixed in the correct orientation, as shown in the image above.

3 STEP


Required Assembly Parts



Color A Panel (with shoes and connector) x 4




Color B Panel (with shoes and connector) x 4

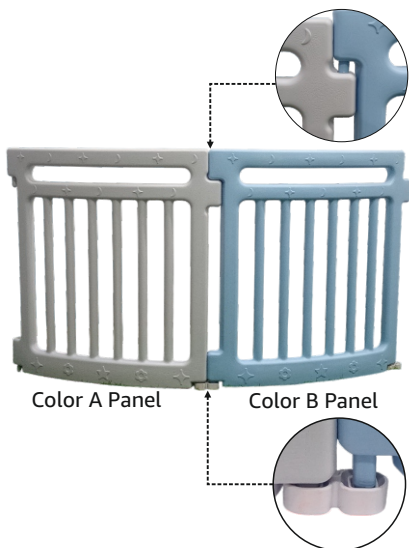

Color A Panel

Color B Panel

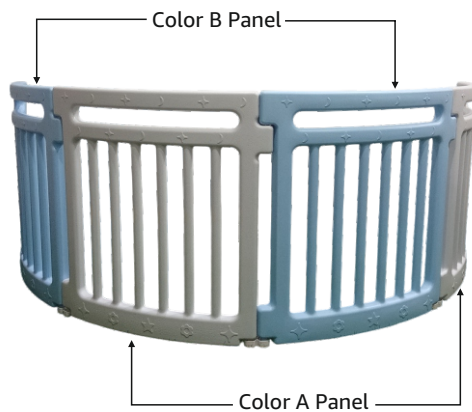

Color B Panel

Color A Panel



Take one color A panel and one color B panel. Position the side of the color A panel (with the connector at the bottom) next to the side of a color B panel (with two pins) and secure them together.

Take another color B panel and secure it to the open end of the color A panel. Next, take another color A panel and secure it to the open end of the color B panel. Continue this alternating pattern until you have secured all the panels, forming a closed shape with the sequence: A-B-A-B-A-B-A-B.

Your Round Play Pen is now ready for use!