



ROXY 2-IN-1

Instructions

Maintenance:

- Before each use, ascertain that all the nuts are firmly tightened and all parts are securely fastened to each other.
- Always wipe with a plane, dry cloth regularly and do not use any harsh chemicals while cleaning.

Caution

- The product must be assembled by an adult only. Keep all the parts out of the reach of kids until the product is fully assembled.
- Kids should hold on to the handle while riding the rocker.
- Adult supervision is recommended when kids are using this product.
- Always place the product on an even surface. Using it on concrete or a rough surface can make it unsteady and may cause injuries.
- Packaging materials are not safe to play with and should be kept away from kids.

Warnings:

- Always assemble the product on a non-abrasive surface, ideally a carpet, to avoid scratched and make sure there are no sharp objects placed nearby.
- Avoid over-tightening the nuts as it may cause damage to the parts.

Part Details



Side Panel x 2



Seat x 1



Backrest x 1



Footrest x 1



Handle x 1



Nut x 20
(2 Spare)



Key x 2



Instruction Manual x 1

List of Parts	No.
Side Panel	2
Seat	1
Backrest	1
Handle	1
Key	2
Nut	20 (2 Spare)
Instruction Manual	1
Footrest	1

1
STEP

Assembly Instructions

Required Assembly Parts



Side Panel x 1



Seat x 1



Backrest x 1




Nut x 8




Key x 1

Before starting the assembly, lay out a carpet on the floor to avoid scratches.

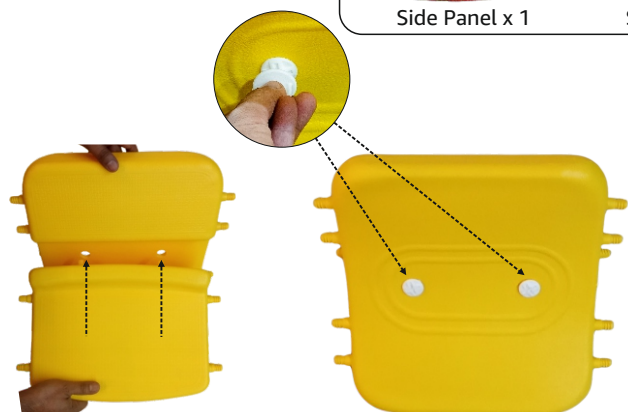

Insert the threaded pins at the back of the seat into the designated slots on the backrest. From the backside of the backrest, secure a nut on the end of the each threaded pin, fastening both the seat and the backrest together.

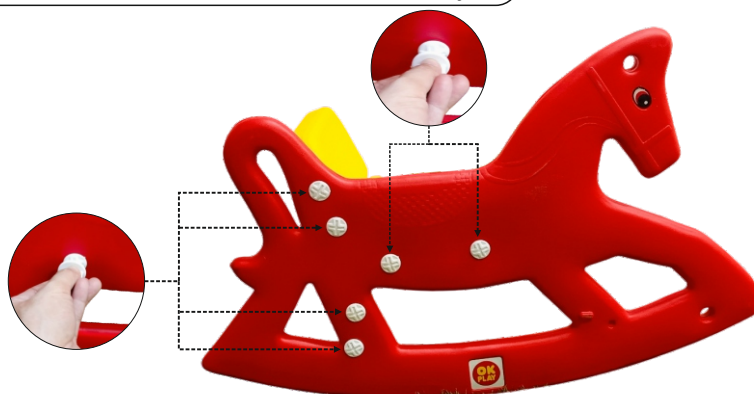

Take a side panel, align its holes with the threaded pins on the side of the seat-backrest subassembly and secure them together by tightening six nuts with the key provided in the packaging.

Note: Make sure the side of the side panel featuring the eye sticker is oriented outward.

Model No: 2160

18+
MONTHS



Scan to Connect

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!



For details of BIS certification, please visit www.bis.gov.in

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE

2 STEP

Required Assembly Parts



Subassembly (Step 1)



Handle x 1



Footrest x 1



Key x 1



Nut x 2



Footmark facing forward



Take the footrest and fasten it to the subassembly (step 1) with a nut as shown in the image.

Note: Before tightening the nut, make sure the footmark printed on the footrest is facing forward (when viewed from the front).

Insert one end of the handle into the designated hole on the side panel and secure them together by tightening a nut with the key provided in the packaging.

3 STEP

Required Assembly Parts



Subassembly (Step 2)



Side Panel x 1



Nut x 8



Key x 1

Take the other side panel and fasten it to the subassembly (step 2) with eight nuts.

Note: While tightening the handle nut, hold the handle firmly to prevent it from spinning.



Your dual-purpose Roxy 2-in-1 is now ready for use! Turn it upside down to transform it into a desk.



Flip it
upside down



When used as a desk, Roxy 2-in-1 has a pull-up desktop that can be lifted to create space for easy seating. Once the kid is comfortably seated, press down on the desk until it is locked into place on the side panels.