



SEESAW

Instructions

Maintenance:

- Before each use, ascertain that all the parts are securely fastened.
- Always wipe the product with a plane, dry cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be assembled by an adult only. Keep all the parts out of the reach of kids until the product is fully assembled.
- Always use the product on an even surface. Using it on concrete or a rough surface can make it unsteady and may cause injuries.
- Packaging materials are not safe to play with and should be kept away from kids.
- Adult supervision is recommended when kids are using the product.
- Keep this manual for future reference.

Warnings:

- Always assemble on a non-abrasive surface, ideally a carpet, to avoid scratches and make sure there are no sharp objects placed nearby.
- Avoid over-tightening the nuts as it may cause damage to the parts.

Part Details




Packaged Product x 1



Key x 2



Base Cap x 2

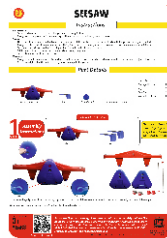

Instruction Manual x 1

List of Parts	No.
Packaged Product	1
Key	2
Base Cap	2
Instruction Manual	1

1 STEP Assembly Instructions

Required Assembly Parts




abc x 1



Key x 2

Before starting the assembly, lay out a carpet on the floor to avoid scratches.

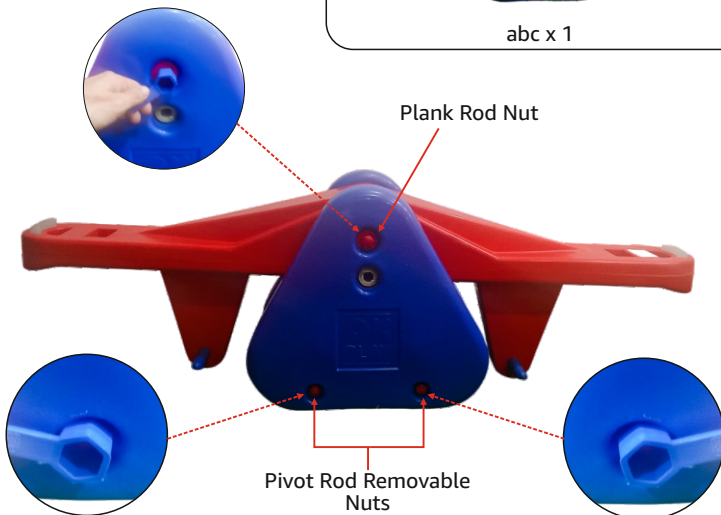

Take the packaged product from the packaging, loosen and take off all the removable nuts one by one with the key and carefully separate all the subparts.

Note: Each pivot rod features a fixed nut at one end and a removable nut at the other end. Plank rod has removable nuts at its both ends.

Model No: 2030-A

3+ YEARS



Scan to Connect

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!



IS : 9873 - PART I


CM/L - 9512463818

For details of BIS certification, please visit www.bis.gov.in

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE

2 STEP

Required Assembly Parts

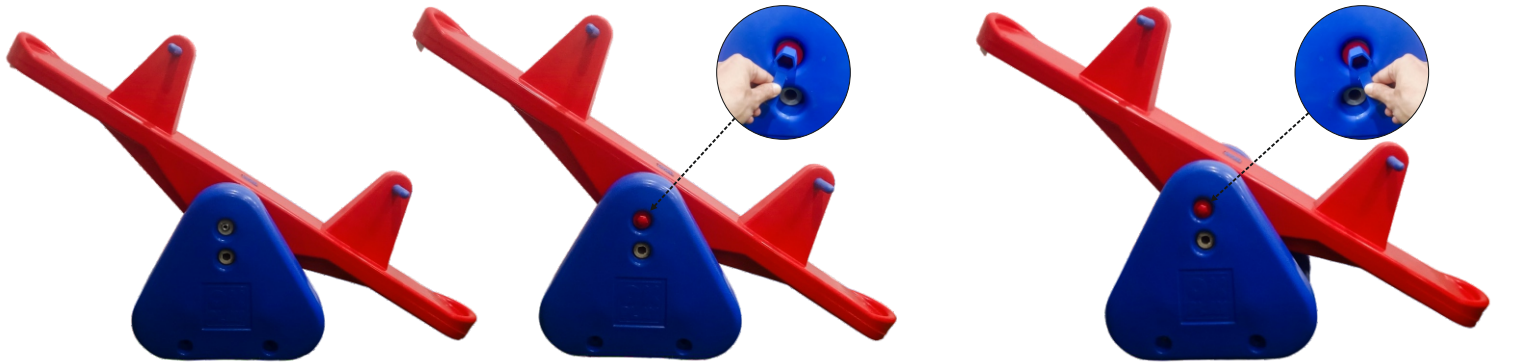


Flip the plank, align its pre-fitted rod with the designated hole on a side panel and secure them together by tightening a plank nut (removed in step 1) with the key.

Note: Before tightening the plank nut, make sure washers are in place on nut.


Similarly, fasten the second side panel to the plank by tightening a plank nut (removed in step 1) with the key.

Note: Before tightening the plank nut, make sure washers are in place on it.

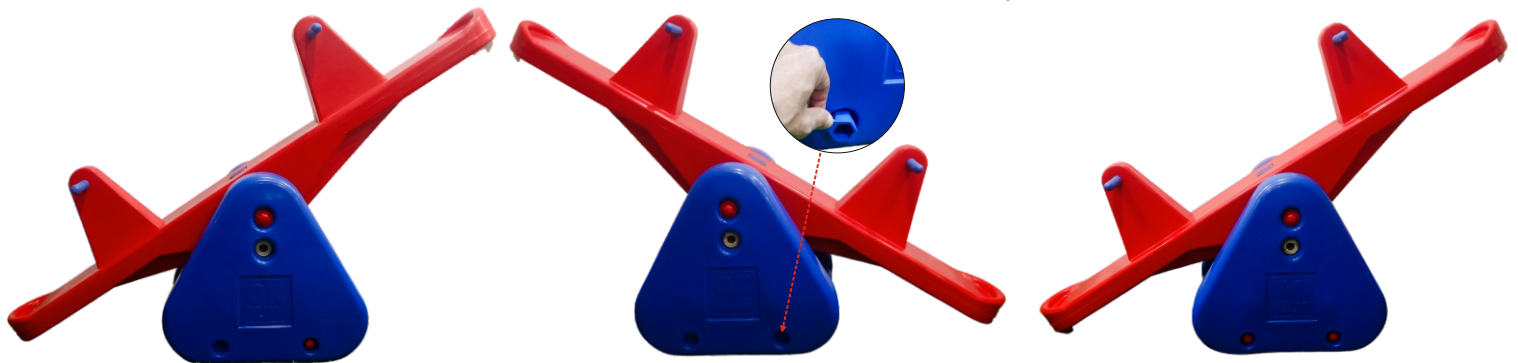

Take a pivot rod (removed in step 1), slide it through the hole of one side panel and then through the hole of the opposite side panel. Place a nut (removed in step 1) onto the loose end of the pivot rod and tighten the nut.

Similarly, secure the other pivot rod to the subassembly.

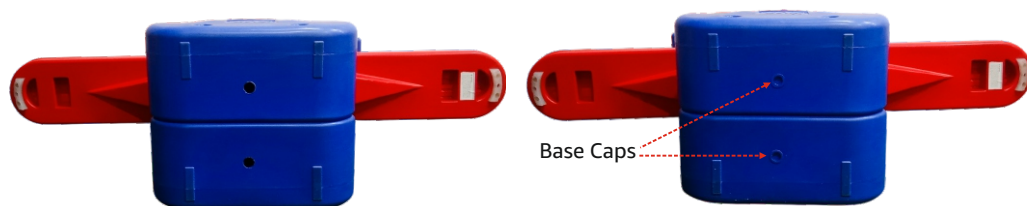

Turn the subassembly over its side and press the base caps into the holes underside the subassembly. Turn the seesaw right side up.

Your Seesaw is now ready for use! You are set to have exciting playtime!

Note: You can adjust the height of the seesaw to suit your needs. To lower the height, align the plank with the lower hole of both the side panels and secure them together with nuts.

