

THE EASEL

Instructions

Maintenance:

- Before each use, ascertain that all the parts are securely fastened and the board is not wobbling.
- Always wipe the product with a plain, dry cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be assembled by an adult only. Keep all the parts out of the reach of kids until the product is fully assembled.
- Always use the product on an even surface. Using it on concrete or a rough surface can make it unsteady and may cause injuries.
- Packaging materials are not safe to play with and should be kept away from kids.
- Adult supervision is recommended when kids are using the product.

Warnings:

- Always assemble on a non-abrasive surface, ideally a carpet, to avoid scratches and make sure there are no sharp objects placed nearby.
- Avoid over-tightening the nuts as it may cause damage to the parts.
- Do not connect any external item (cable, rope or chain) to the product.

Part Details



Drawing Board x 1



Board Leg x 4



Utility Tray x 1



Instruction Manual x 1

List of Parts	No.
Drawing Board	1
Board Leg	4
Utility Tray	1
Instruction Manual	1


1
STEP

Assembly Instructions

Required Assembly Parts



Drawing Board x 1

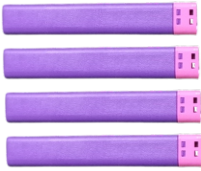

Board Leg x 4

Before starting the assembly, lay out a carpet on the floor to avoid scratches.

Raised Side of the Leg



Take a board leg, align the opening at its top with a leg attachment point on the drawing board. Push the leg firmly until it is securely attached to the board. Similarly, attach the three other legs to the drawing board.

Note: Before attaching a leg, make sure the raised side at the bottom of the leg is oriented to face outward.

Model No: 4020

3+
YEARS



Customer Support



Assembly Video

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE



IS : 9873 - PART 1

For details of BIS certification, please visit www.bis.gov.in

2 STEP


Required Assembly Parts



Subassembly (Step 1)



Utility Tray x 1

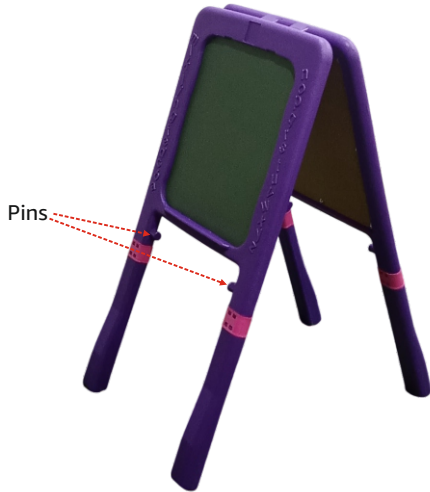

Position the subassembly (step 1) on a flat surface making sure its base is in contact with the ground and move its rear side to the desired extension.



Take the utility tray, position it below the drawing board making sure the cuts on its longer underside edges align precisely with the drawing board pins. Push the utility tray downwards to ensure a secure fit.

The Easel features two drawing surfaces: whiteboard side and blackboard side. Use only whiteboard markers on the whiteboard and chalk on the blackboard.

The Easel is now ready for use! It's time to unleash your creativity!