



CASTLE SWING

Instructions

Maintenance:

- Before each use, ascertain that all the fasteners are firmly tightened and all the parts are securely fastened.
- Always wipe the product with a plane, dry cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be assembled by an adult only. Keep all the parts out of the reach of kids until the product is fully assembled.
- Make sure the child is seated properly and holding onto the handles securely while swinging.
- Always place the product on an even surface. Using it on concrete or a rough surface can make it unsteady and may cause injuries.
- Packaging materials are not safe to play with and should be kept away from kids.
- Adult supervision is recommended when kids are using this product.
- The product is intended for use by kids over 2 years of age.

Warnings:

- Always assemble on a non-abrasive surface, ideally a carpet, to avoid scratches and make sure there are no sharp objects placed nearby.
- Avoid over-tightening the fasteners as it may cause damage to the parts.

Part Details



Side Panel x 2



Cross x 1



Swing Seat x 1



Swing Strap x 2



Swing Top x 1



Happy Step x 1



Allen Bolt (m6 x 20)
x 3 (1 Spare)



Hex Nut x 3 (1
Spare)



Platform x 2



Swing Panel x 2



Swing Step x 1



Allen Key x 1

List of Parts	No.
Side Panel	2
Cross	1
Swing Seat	1
Swing Strap	2
Swing Top	1
Happy Step	1
Allen Bolt (m6 x 20)	3 (1 Spare)
Hex Nut	3 (1 Spare)
Platform	2
Swing Panel	2
Swing Step	1
Allen Key	1
Medium Nut	2 (1 Spare)
Key	2
Big Nut	8 (2 Spare)
Small Nut	10 (2 Spare)
Instruction Manual	1



Medium Nut x 2
(1 Spare)




Key x 2



Big Nut x 8 (2
Spare)



Small Nut x
10 (2 Spare)

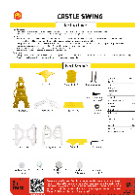

Instruction
Manual x 1

Model No: 21407

2+
YEARS



Scan to Connect

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE



For details of BIS certification,
please visit www.bis.gov.in

1 STEP

Assembly Instructions

Required Assembly Parts




Before starting the assembly, lay out a carpet on the floor to avoid scratches.

Smooth side should be inwards



Take the swing seat and bend it at its central crease from the smooth side.

Note: While bending the swing seat, make sure the smooth side faces inwards (to form the seat and the backrest) and the rough side faces outwards.

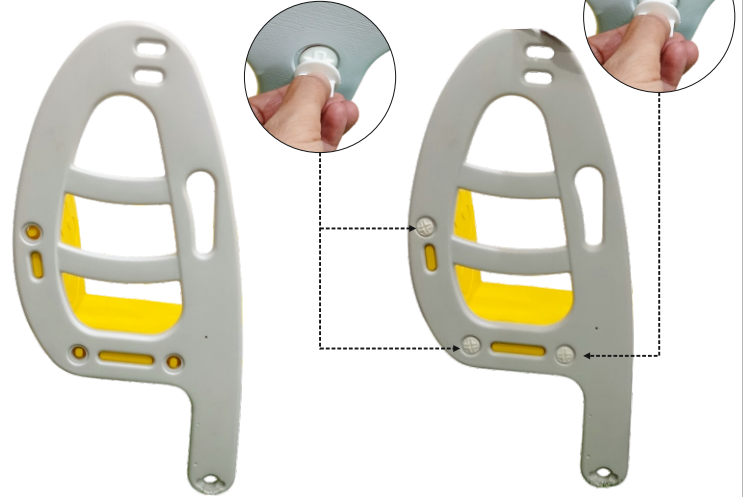

Align the threaded pins on the side of the seat panel with the designated holes on the side panel. Push the seat panel sideways towards the side panel, guiding the pins through the holes.

Put a small nut onto the end of each threaded pin and tighten, securing both the seat panel and the side panel together.

Note: Make sure the swing panel is positioned correctly, following the orientation as shown in the images above.

Required Assembly Parts

2 STEP



Take the swing step, align the threaded pin on its side with the designated hole on the side panel (subassembly - step 1) and secure both together with a small nut.

Note: Make sure the swing step is positioned correctly with the footmarks printed on it pointing forward.




Take the other swing panel and fix it to the subassembly with four small nuts.

Note: Do not fully tighten the swing panel nuts at this stage.

3 STEP

Required Assembly Parts

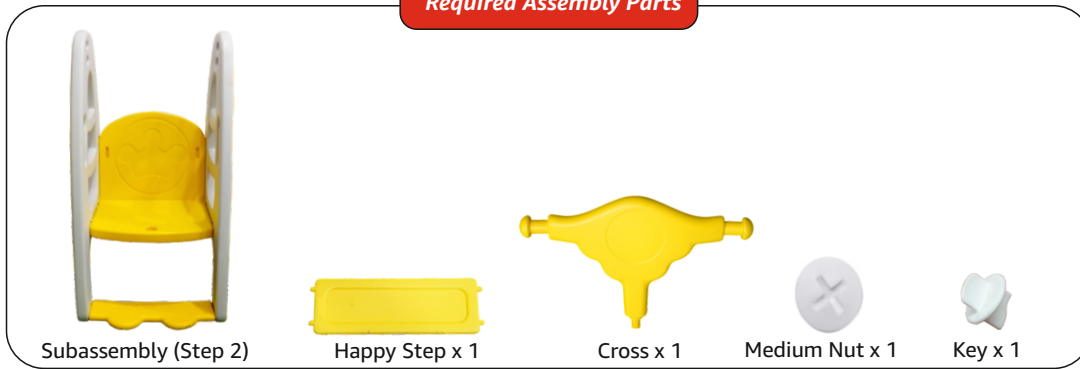



Take a happy step and position it vertically at an angle above the swing step. Gently push the one side of the happy step, locking its side pins into the small circular slots on the swing side panel. Thereafter, apply pressure on the other side of the happy step to fix it in place on the other swing side panel.

Note: Fully tighten the swing panel nuts now.

Take the cross and position it vertically between the two side panels. Align the threaded pin at the bottom of the cross with the designated hole on the seat and fasten them together by tightening a medium nut with the key.

4 STEP

Required Assembly Parts

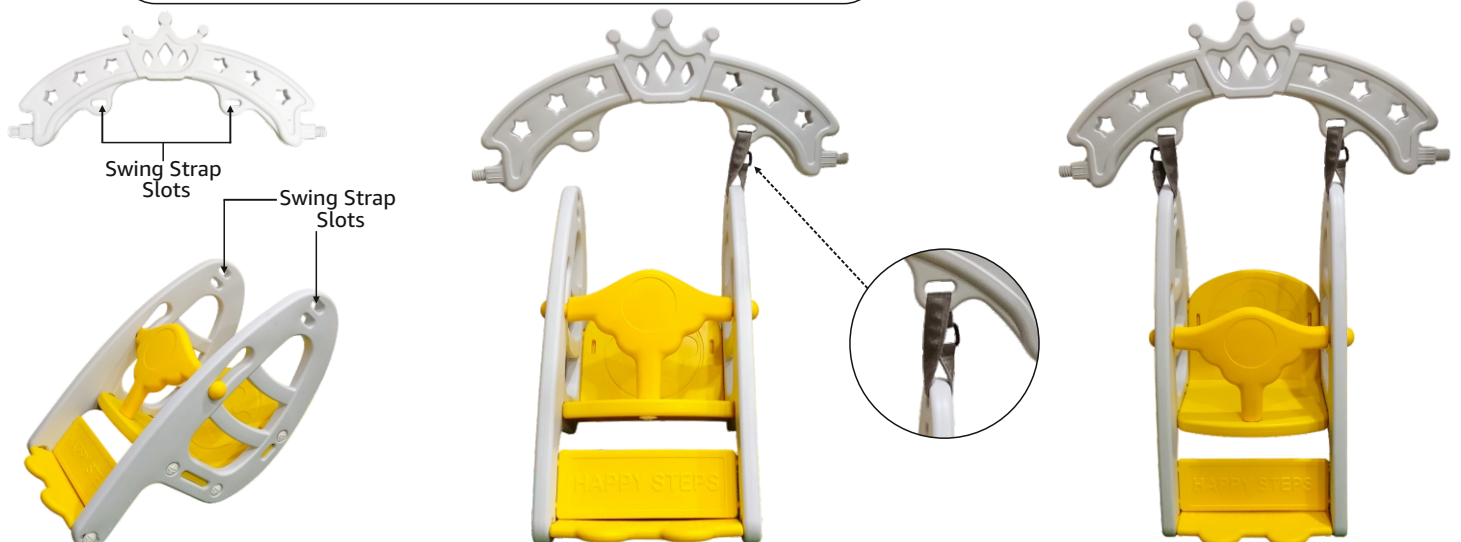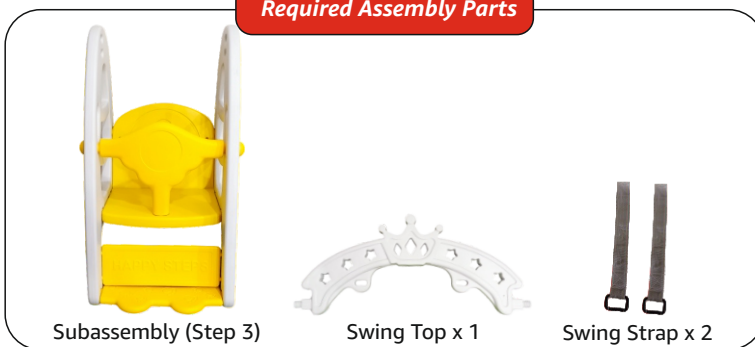

Take a swing strap and thread its loose end through the designated strap slots on the subassembly (step 3) and the swing top. Pull the strap tight to bring the swing top and the subassembly close, and secure the loose end of the swing strap into the buckle. Similarly, fasten the other swing strap, securely fastening the swing top to the swing subassembly.

5 STEP

Required Assembly Parts



Platform x 2




Allen Bolt (m6 x 20) x 2




Allen Key x 1




Hex Nut x 2

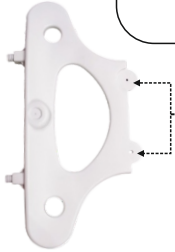


Screw Holes

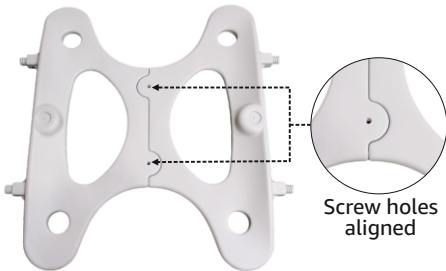

Screw holes aligned

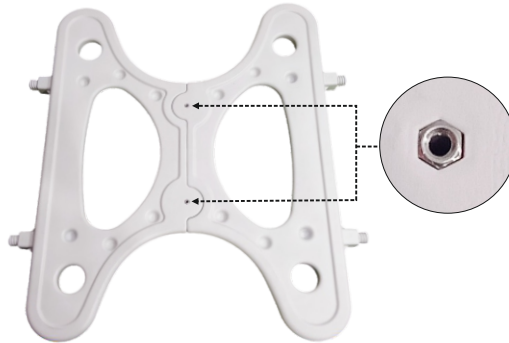

From underneath the aligned panels, fix a hex nut under each set of the aligned screw holes.

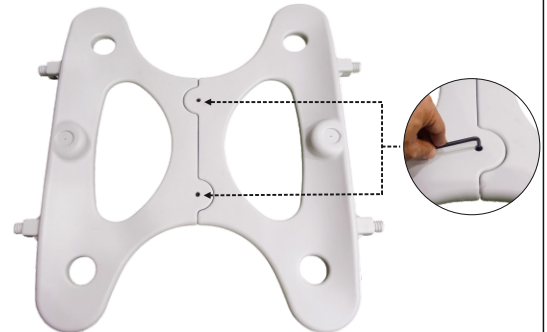

From the top of the aligned panels, insert an allen bolt into each set of the aligned screw holes and tighten the bolts one by one with the allen key provided in the packaging.

6 STEP

Required Assembly Parts




Subassembly (Step 5)



Big Nut x 4



Side Panel x 2

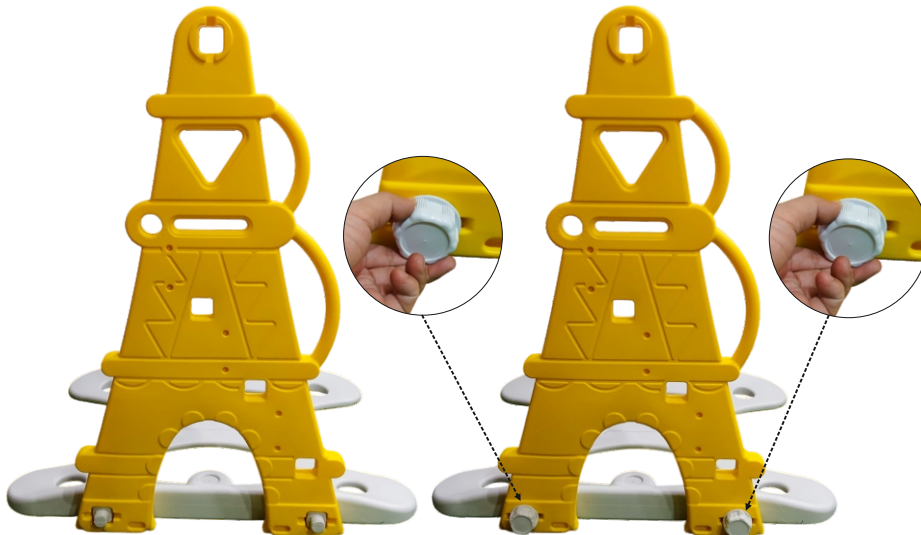

Take a side panel from the packaging. Align the threaded pins on the side of the subassembly (step 5) with the designated holes on the side panel and secure both together with two big nuts.



Similarly, fasten the other side panel on the other side of the subassembly (step 5).

7 STEP

Required Assembly Parts




Subassembly (Step 4)



Subassembly (Step 6)



Big Nut x 2

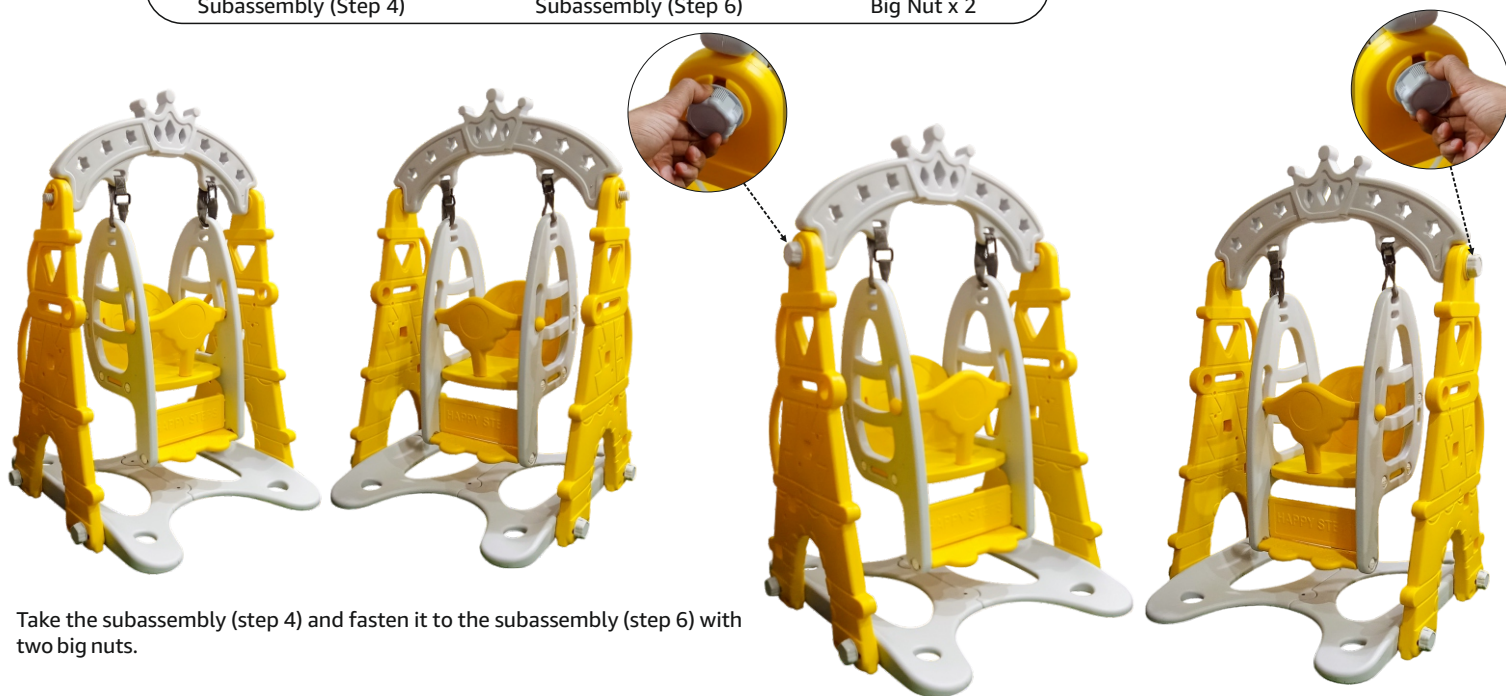

Take the subassembly (step 4) and fasten it to the subassembly (step 6) with two big nuts.

Your Castle Swing is now ready for use! Let the fun begin!

