



PENGUIN SWING, SLIDE & BASKETBALL

Instructions

Maintenance:

- Before each use, ascertain that all the fasteners are firmly tightened and all the parts are securely fastened.
- Always wipe the product with a plane, dry cloth regularly and avoid using harsh chemicals.

Caution:

- The product must be assembled by an adult only. Keep all the parts out of the reach of kids until the product is fully assembled.
- Make sure the child is seated properly and holding onto the handles securely while swinging. Always sit upright and go down feet first on the slide.
- Climbing up the side, sliding down headfirst or in a standing position can be fatal and should be avoided at all costs.
- Always place the product on an even surface. Using it on concrete or a rough surface can make it unsteady and may cause injuries.
- Packaging materials are not safe to play with and should be kept away from kids.
- Adult supervision is recommended when kids are using this product.
- The product is intended for use by kids over 2 years of age.

Warnings:

- Always assemble on a non-abrasive surface, ideally a carpet, to avoid scratches and make sure there are no sharp objects placed nearby.
- Avoid over-tightening the fasteners as it may cause damage to the parts.

Part Details



List of Parts	No.
Slide Step	2
Cross	1
Swing Seat	1
Swing Strap	2
Side Panel	3
Swing Top	1
Small Slide	1
Big Slide	1
Platform	2
Swing Panel	2
Happy Step	1
Swing Step	1
Ball	1
Basketball Ring	1
Hex Nut	3 (1 Spare)
Sticker Set	1
Medium Nut	3 (1 Spare)
Allen Key	1
Allen Bolt Big	3 (1 Spare)
Allen Bolt Small	3 (1 Spare)
Key	2
Big Nut	16 (2 Spare)
Small Nut	10 (2 Spare)
Washer	3 (1 Spare)
Instruction Manual	1

Model No: 21409

2+
YEARS



Scan to Connect

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!



IS : 9873 - PART I

CM/L - 9512463818

For details of BIS certification, please visit www.bis.gov.in

DISCLAIMER: ACTUAL PRODUCT COLOR MAY VARY FROM THAT SHOWN IN THE IMAGE

1

STEP

Assembly Instructions

Required Assembly Parts



Swing Panel x 1



Swing Seat x 1




Small Nut x 3



Key x 1

Before starting the assembly, lay out a carpet on the floor to avoid scratches.

Smooth side should be inwards

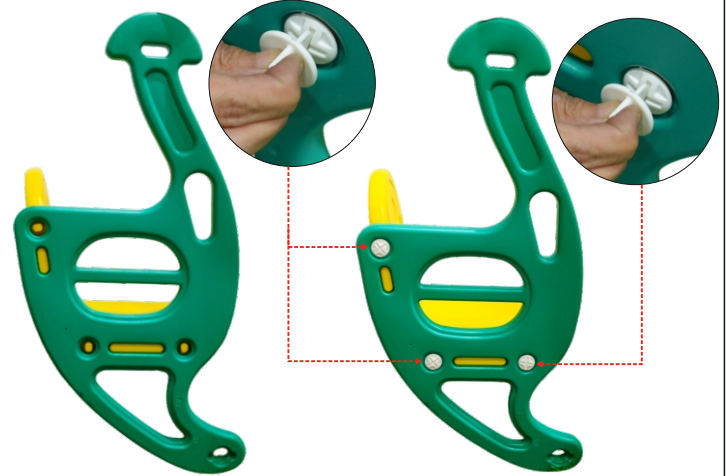

Take the swing seat and bend it at its central crease from the smooth side.

Note: While bending the swing seat, make sure the smooth side faces inwards (to form the seat and the backrest) and the rough side faces outwards.

Align the threaded pins on the edge of the bended swing seat with the designated slots on the swing panel. Push the swing seat sideways towards the side panel, guiding the pins through the holes.

Put a small nut onto the end of each threaded pin and tighten with the key provided in the packaging, securing both the swing seat panel and the side panel together.

Note: Make sure the swing panel is positioned correctly, following the orientation as shown in the images above.

Required Assembly Parts

2

STEP



Subassembly (Step 1)



Swing Step x 1



Swing Panel x 1



Small Nut x 5



Key x 1



Take the swing step, align the threaded pin on one of its sides with the designated slot on the side panel (subassembly - step 1) and secure both together with a small nut.

Note: Make sure the swing step is positioned correctly with the footmarks printed on it pointing forward.



Take the other swing panel and fix it to the subassembly by tightening four small nuts with the key provided in the packaging.

Note: Do not fully tighten the nuts at this stage.

3 STEP

Required Assembly Parts



Subassembly (Step 2)



Happy Step x 1



Cross x 1



Medium Nut x 1



Key x 1



Take the happy step and position it vertically at an angle above the swing step. Gently push the one side of the happy step, locking the pins on its edge into the small circular slots on the swing side panel. Thereafter, apply pressure on the other side of the happy step to secure it in place.

Note: Fully tighten the swing side panel nuts now.



Take the cross and position it vertically between the two side panels. Align the threaded pin at the bottom of the cross with the designated hole on the seat and fasten them together with a medium nut.

4 STEP

Required Assembly Parts




Subassembly (Step 3)



Swing Top x 1



Swing Strap x 2

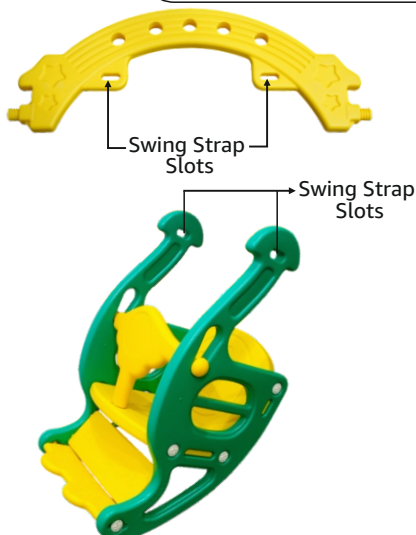

Take a swing strap and thread its loose end through the designated strap slots on the subassembly (step 3) and the swing top. Pull the strap tight to bring the swing top and the subassembly close, and secure the loose end of the strap into the buckle. Similarly, fasten the other swing strap, fastening the swing top to the swing subassembly.

5 STEP

Required Assembly Parts



Platform x 2






Allen Bolt Big x 2



Allen Key x 1



Hex Nut x 2

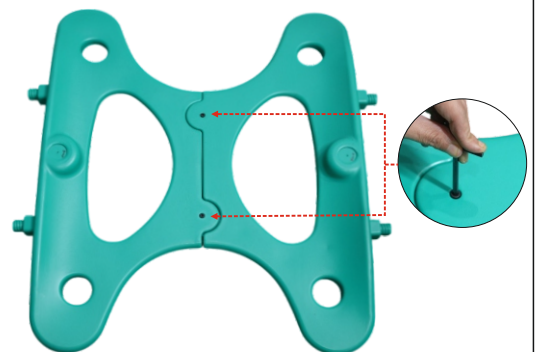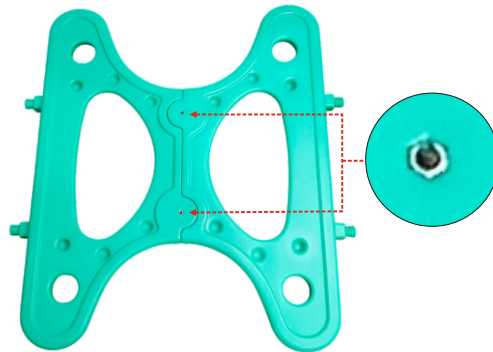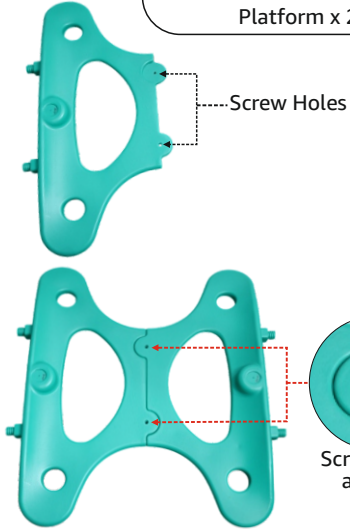

Take both the platforms from the packaging, place them opposite each other and align their screw holes.

From underneath the aligned panels, fix a hex nut under each set of the aligned screw holes.

From the top of the aligned panels, insert a big allen bolt into each set of the aligned screw holes and tighten the bolts one by one with the allen key provided in the packaging.

6 STEP

Required Assembly Parts




Subassembly (Step 5)



Big Nut x 4



Side Panel x 2

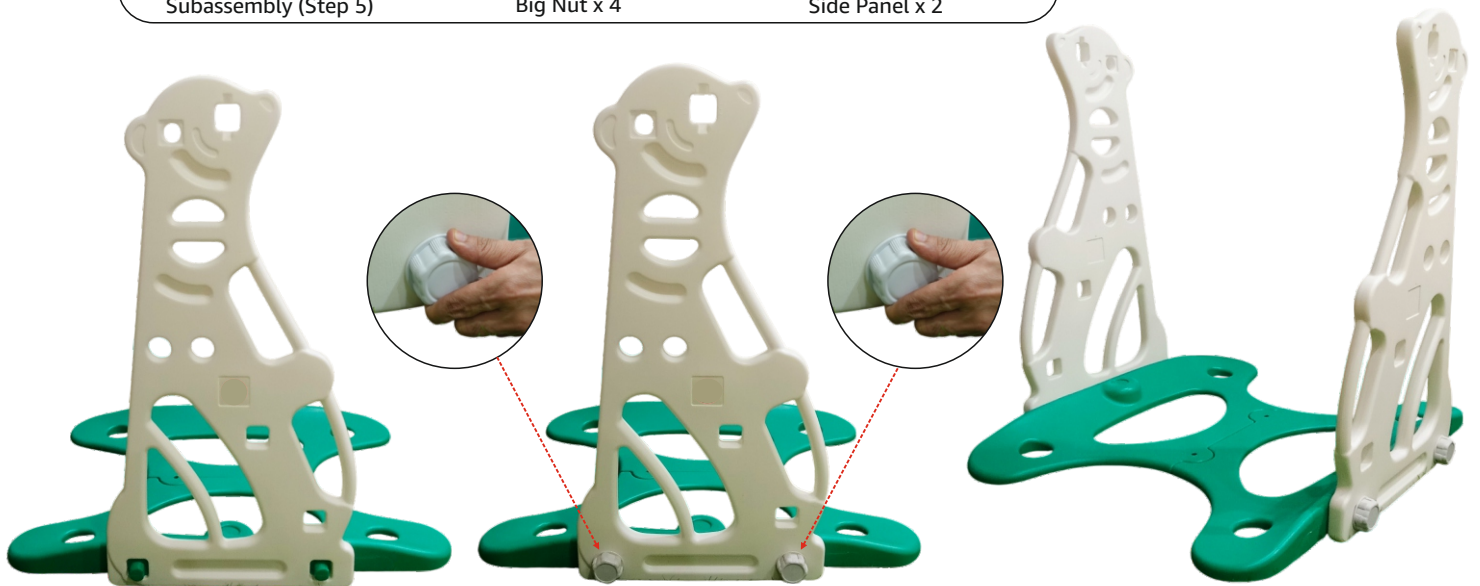

Align the threaded pins on the side of the subassembly (step 5) with the designated holes on a side panel and secure both together with two big nuts. Similarly, fasten the other side panel on the other side of the subassembly (step 5).

7 STEP

Required Assembly Parts



Subassembly (Step 4)



Subassembly (Step 6)



Big Nut x 2



Take the subassembly (step 4) and fasten it to the subassembly (step 6) with two big nuts.

8 STEP

Required Assembly Parts



Big Slide



Small Slide




Allen Bolt Small x 2



Washer x 2



Allen Key x 1

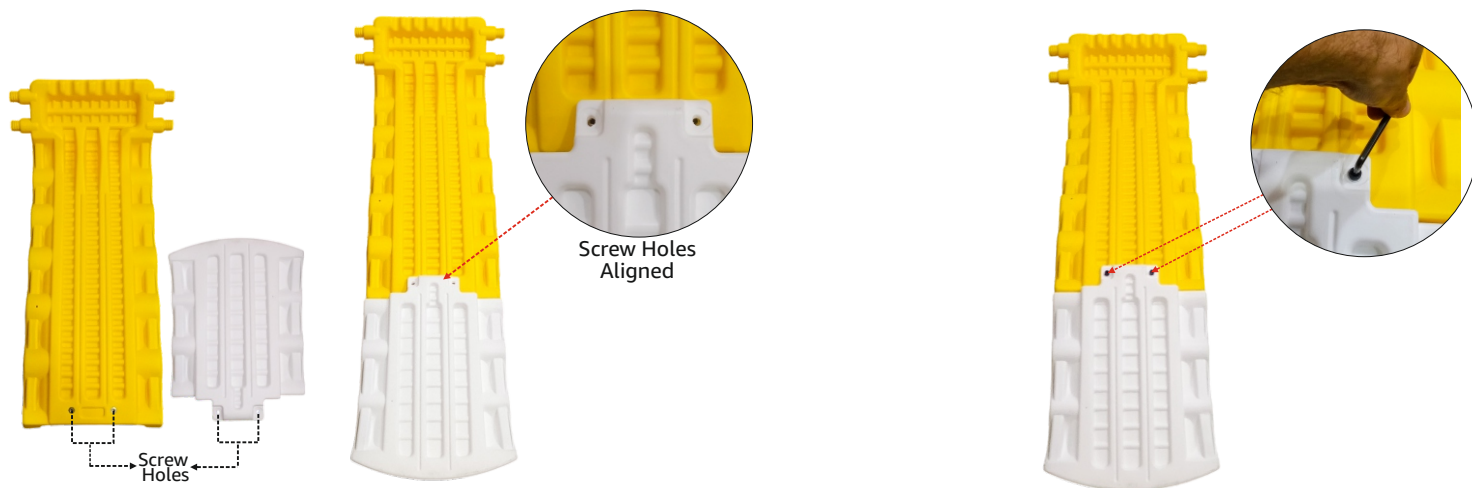

Take the big and small slides, turn them face down and align their screw holes. Make sure the screw holes of the small slide are over the screw holes of the big slide.

Put a washer onto both the small allen bolts and insert a small allen bolt (with the washer) into each of the two aligned screw holes. Tighten both the allen bolts one by one with the allen key, securing both the slides together.

9 STEP

Required Assembly Parts



Subassembly (Step 7)



Slide Step x 2



Big Nut x 2



Take a slide step from the packaging, align the threaded pin on its side with the designated hole on the side panel of the subassembly (step 7) and secure them together with a big nut. Similarly, attach the other slide step to the subassembly.

10 STEP

Required Assembly Parts



Subassembly (Step 9)




Slide Subassembly (Step 8)



Big Nut x 6



Side Panel x 1

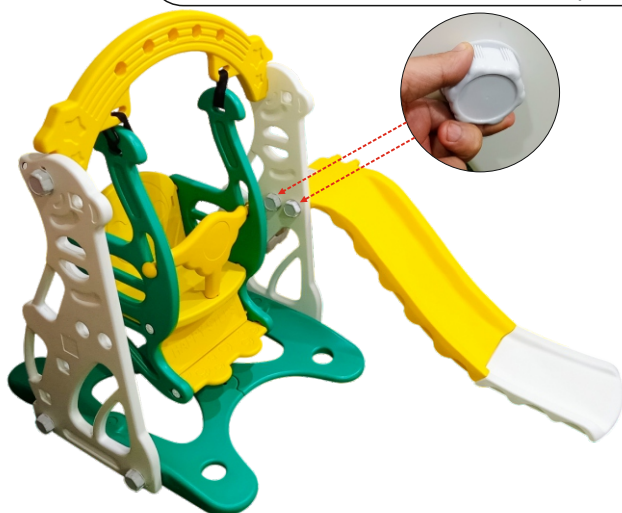

Take the slide subassembly (step 8), align the threaded pins on its top edge with the designated holes on the side panel (subassembly step 9) and fasten them together with two big nuts.



Take the side panel and secure it to the subassembly with four big nuts.

11 STEP

Required Assembly Parts



Subassembly (Step 10)



Sticker Set x 1




Basketball Ring x 1



Medium Nut x 1



Key x 1

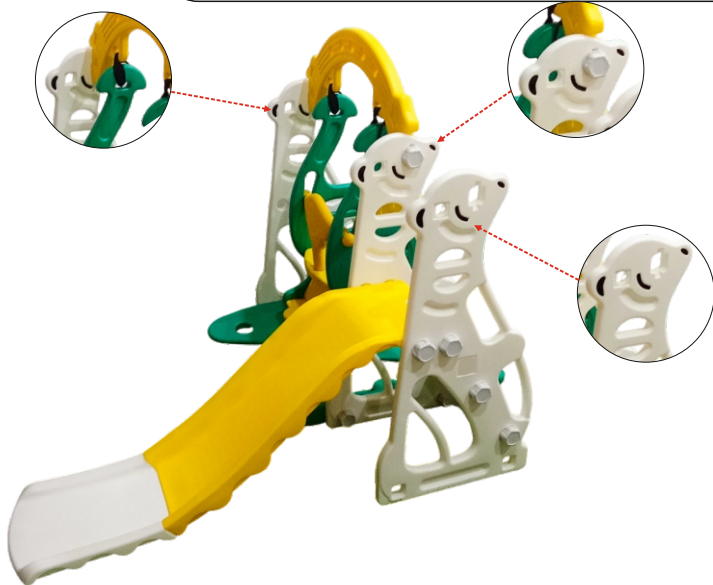

Paste the stickers on the inner and outer sides of the all three side panels at the positions as shown in the image above.



Take the basketball ring and mount it on the side panel with a medium nut.

Your Penguin 3 in 1 is now ready for use! Let the fun begin!